


# Krężnik tarczowy

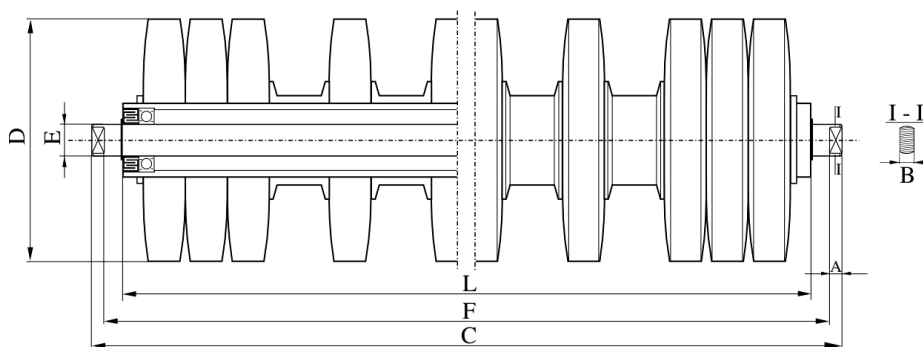

L	F	Ø 89/ Ø 51 Ø 108/ Ø 51 Ø 133/ Ø 51	Ø 89/ Ø 63,5 Ø 108/ Ø 63,5 Ø 133/ Ø 63,5 Ø 159/ Ø 63,5		Ø 133/ Ø 89 Ø 159/ Ø 89		Ø 159/ Ø 108 Ø 190/ Ø 108 Ø 194/ Ø 108		Ø 215/ Ø 133	
		C	C	C	C	C	C	C	C	C
160	168	186	186	192	186	192	186	192		
200	208	226	226	232	226	232	226	232		
250	258	276	276	282	276	282	276	282	276	282
315	323	341	341	347	341	347	341	347	341	347
380	388	406	406	412	406	412	406	412	406	412
465	473	491	491	497	491	497	491	497	491	497
500	508	526	526	532	526	532	526	532	526	532
530	538	556	556	562	556	562	556	562	556	562
600	608	626	626	632	626	632	626	632	626	632
670	678	696	696	702	696	702	696	702	696	702
700	708	726	726	732	726	732	726	732	726	732
750	758	788	788	798	788	798	788	798	788	798
800	808	838	838	848	838	848	838	848	838	848
900	908	938	938	948	938	948	938	948	938	948
950	958	988	988	998	988	998	988	998	988	998
1000	1008	1038	1038	1048	1038	1048	1038	1048	1038	1048
1050	1058	1088	1088	1098	1088	1098	1088	1098	1088	1098
1150	1158	1188	1188	1198	1188	1198	1188	1198	1188	1198
1400	1408		1438	1448	1438	1448	1438	1448	1438	1448
1500	1508			1548	1538	1548	1538	1548	1538	1548
1600	1608			1648	1638	1648	1638	1648	1638	1648
1800	1808							1848	1838	1848
2000	2008							2048		2048
Łożysko		6204	6204	6205	6204	6305 6206	6204	6305 6206 6307	6204	6305 6206 6307 6308

Oznaczenie krążnika np. T108/63,5/E-N/6204-L/F/C-BxA  
T108/63,5/E-S/6204-L/F/C-BxA